


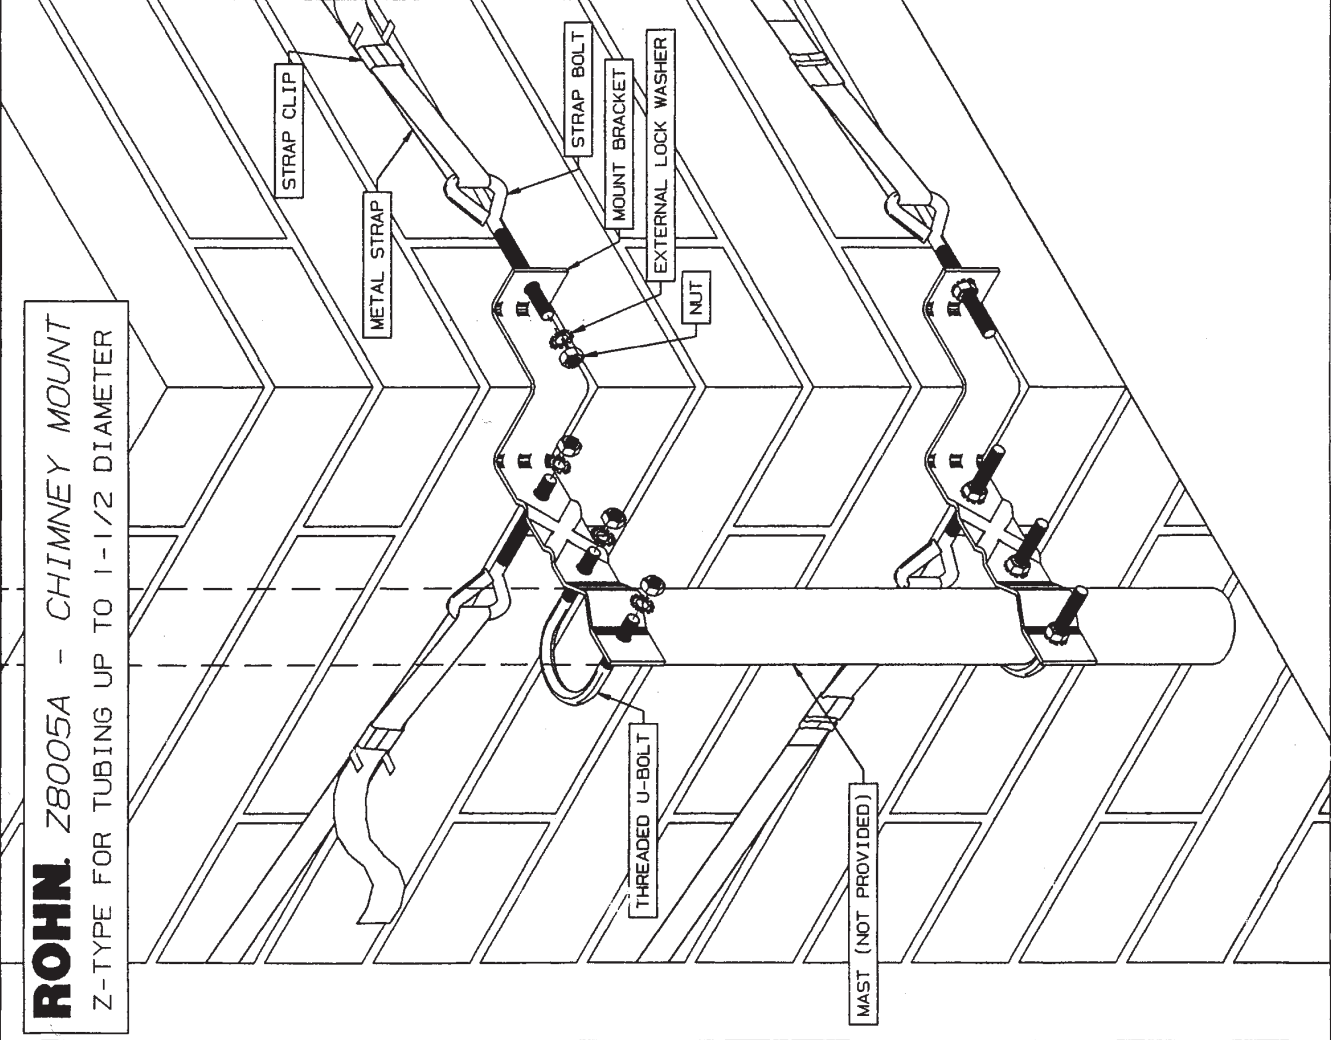

ROHN Z8005A - CHIMNEY MOUNT
Z-TYPE FOR TUBING UP TO 1-1/2 DIAMETER

ASSEMBLY INSTRUCTIONS:

1. START STRAP BOLTS INTO BRACKET HOLES, SCREWING APPROXIMATELY 1/4" THRU EXTERNAL LOCK WASHERS INTO NUTS. BRACKET AGAINST CHIMNEY CORNER AS SHOWN IN DIAGRAM.
2. WRAP METAL STRAP AROUND CHIMNEY AND SLIP THRU THE STRAP CLIPS. WORK STRAP THRU THE HOOK END OF THE BOLT AND SLIP BACK THRU THE CLIP AS SHOWN. USE PLIERS TO CRIMP THE CLIP TO SECURE THE STRAP.
3. TIGHTEN THE NUTS ON THE STRAP BOLTS TO REMOVE ANY EXCESS METAL STRIP. CUT-OFF ANY EXCESS METAL STRIP.
4. REPEAT ABOVE STEPS FOR THE SECOND BRACKET ASSEMBLY. THE BRACKET SHOULD BE A MINIMUM OF 18" APART, VERTICALLY.
5. ATTACH THE U-BOLTS INTO POSITION AS SHOWN WITH EXTERNAL LOCK WASHERS AND NUTS.
6. SLIDE THE MAST INTO CHIMNEY MOUNT BRACKET AND TIGHTEN THE NUTS OF THE U-BOLTS TO SECURE THE MOUNT.
7. IT IS THE INSTALLER'S RESPONSIBILITY TO VERIFY THAT THE CHIMNEY MOUNTING SURFACE, AND THE ENTIRE INSTALLATION IS ADEQUATE TO WITHSTAND ALL LOADS IMPOSED BY THIS MOUNT, ANTENNA, OR ANY INSTALLATION ACCESSORIES SUCH AS A LADDER OR THE WEIGHT OF A MAN.
8. LOCAL ZONING AND/OR BUILDING CODES AND INSURANCE COMPANIES MAY REQUIRE ARCHITECT OR STRUCTURAL ENGINEERING APPROVAL PRIOR TO INSTALLATION.
9. ALL ANTENNA INSTALLATIONS SHOULD BE GROUNDED BY THE INSTALLER TO MEET ALL APPLICABLE CODES. TO ENSURE SAFETY, NO INSTALLATION, ROOF OR WALL, SHOULD BE ATTEMPTED WITHOUT A LOCAL PROFESSIONAL STRUCTURAL ANALYSIS.
10. INSPECT MOUNT AND ANTENNA INSTALLATION EVERY 6 MONTHS (OR AFTER EVERY STORM) FOR TIGHTNESS.



ROHN.	
Title	Z8005A - CHIMNEY MOUNT ASSEMBLY
Scale	None
Drawn by	TDS
Checked by	TDS
Approved by Engineering	04/19/96
Approved by Production	03/28/96
Approved by Sales	04/19/96
File Number	EF-41675
Drawing Number	C960060R1
Drawing Type	ASSY